



Model 400A84

CABLE TEST BOX

Installation and Operating Manual

**For assistance with the operation of this product,
contact PCB Piezotronics, Inc.**

**Toll-free: 800-828-8840
24-hour SensorLine: 716-684-0001
Fax: 716-684-0987
E-mail: info@pcb.com
Web: www.pcb.com**



Repair and Maintenance

PCB guarantees Total Customer Satisfaction through its “Lifetime Warranty Plus” on all Platinum Stock Products sold by PCB and through its limited warranties on all other PCB Stock, Standard and Special products. Due to the sophisticated nature of our sensors and associated instrumentation, **field servicing and repair is not recommended and, if attempted, will void the factory warranty.**

Beyond routine calibration and battery replacements where applicable, our products require no user maintenance. Clean electrical connectors, housings, and mounting surfaces with solutions and techniques that will not harm the material of construction. Observe caution when using liquids near devices that are not hermetically sealed. Such devices should only be wiped with a dampened cloth—never saturated or submerged.

In the event that equipment becomes damaged or ceases to operate, our Application Engineers are here to support your troubleshooting efforts 24 hours a day, 7 days a week. Call or email with model and serial number as well as a brief description of the problem.

Calibration

Routine calibration of sensors and associated instrumentation is necessary to maintain measurement accuracy. We recommend calibrating on an annual basis, after exposure to any extreme environmental influence, or prior to any critical test.

PCB Piezotronics is an ISO-9001 certified company whose calibration services are accredited by A2LA to ISO/IEC 17025, with full traceability to SI through N.I.S.T. In addition to our standard calibration services, we also offer specialized tests, including: sensitivity at elevated or cryogenic temperatures, phase response, extended high or low frequency response, extended range, leak testing, hydrostatic pressure testing, and others. For more information, contact your local PCB Piezotronics distributor, sales representative, or factory customer service representative.

Returning Equipment

If factory repair is required, our representatives will provide you with a Return Material Authorization (RMA) number, which we use to reference any information you have already provided and expedite the repair process. This number should be clearly marked on the outside of all returned package(s) and on any packing list(s) accompanying the shipment.

Contact Information

PCB Piezotronics, Inc.
3425 Walden Ave.
Depew, NY14043 USA
Toll-free: (800) 828-8840
24-hour SensorLine: (716) 684-0001
General inquiries: info@pcb.com
Repair inquiries: rma@pcb.com

For a complete list of distributors, global offices and sales representatives, visit our website, www.pcb.com.

Safety Considerations

This product is intended for use by qualified personnel who recognize shock hazards and are familiar with the precautions required to avoid injury. While our equipment is designed with user safety in mind, the protection provided by the equipment may be impaired if equipment is used in a manner not specified by this manual.

Discontinue use and contact our 24-Hour Sensorline if:

- Assistance is needed to safely operate equipment
- Damage is visible or suspected
- Equipment fails or malfunctions

For complete equipment ratings, refer to the enclosed specification sheet for your product.

Definition of Terms and Symbols

The following symbols may be used in this manual:



DANGER

Indicates an immediate hazardous situation, which, if not avoided, may result in death or serious injury.

**CAUTION**

Refers to hazards that could damage the instrument.

**NOTE**

Indicates tips, recommendations and important information. The notes simplify processes and contain additional information on particular operating steps.

The following symbols may be found on the equipment described in this manual:



This symbol on the unit indicates that high voltage may be present. Use standard safety precautions to avoid personal contact with this voltage.



This symbol on the unit indicates that the user should refer to the operating instructions located in the manual.



This symbol indicates safety, earth ground.



PCB工业监视和测量设备 - 中国RoHS2公布表

PCB Industrial Monitoring and Measuring Equipment - China RoHS 2 Disclosure Table

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
住房	0	0	0	0	0	0
PCB板	X	0	0	0	0	0
电气连接器	0	0	0	0	0	0
压电晶体	X	0	0	0	0	0
环氧	0	0	0	0	0	0
铁氟龙	0	0	0	0	0	0
电子	0	0	0	0	0	0
厚膜基板	0	0	X	0	0	0
电线	0	0	0	0	0	0
电缆	X	0	0	0	0	0
塑料	0	0	0	0	0	0
焊接	X	0	0	0	0	0
铜合金/黄铜	X	0	0	0	0	0
本表格依据 SJ/T 11364 的规定编制。						
0：表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。						
X：表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。						
铅是欧洲RoHS指令2011/65/ EU附件三和附件四目前由于允许的豁免。						

CHINA RoHS COMPLIANCE

Component Name	Hazardous Substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium VI Compounds (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	O	O	O	O	O	O
PCB Board	X	O	O	O	O	O
Electrical Connectors	O	O	O	O	O	O
Piezoelectric Crystals	X	O	O	O	O	O
Epoxy	O	O	O	O	O	O
Teflon	O	O	O	O	O	O
Electronics	O	O	O	O	O	O
Thick Film Substrate	O	O	X	O	O	O
Wires	O	O	O	O	O	O
Cables	X	O	O	O	O	O
Plastic	O	O	O	O	O	O
Solder	X	O	O	O	O	O
Copper Alloy/Brass	X	O	O	O	O	O

This table is prepared in accordance with the provisions of SJ/T 11364.


O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.

X: Indicates that said hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement of GB/T 26572.

Lead is present due to allowed exemption in Annex III or Annex IV of the European RoHS Directive 2011/65/EU.

Operating Instructions

Model 400A84

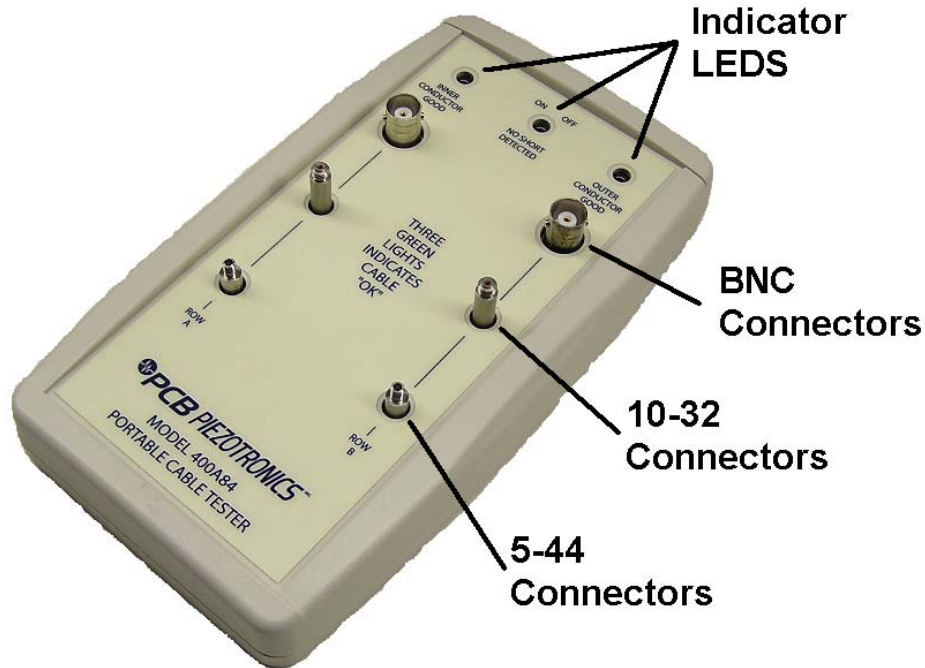

1.0 DESCRIPTION

The 400A84 is a portable cable tester that can be used to verify the integrity of any two conductor cable. While the unit features BNC, 10-32 and 5-44 connectors on its front panel, a variety of adaptors are available for the user who wants to test cables with another type of two-conductor connector on his/her cables. A single 9V battery, installed in a rear compartment, powers the 400A84.

The 400A84 will detect, and accurately identify any cable with a single fault or open as having a bad inner conductor, bad outer conductor or short.

The 400A84 will detect, and accurately identify any two faults or opens in a cable as being problems with the inner conductor, outer conductor and/or a short with one exception: The combination of a short somewhere in the cable, accompanied by the lack of a connection to the “outer conductor” of the “ROW B” connector will be identified as being a bad outer conductor only.

The 400A84 will detect more than two faults or opens in a cable, but will not accurately identify the nature of the faults or opens.

2.0 OPERATION

Before connecting a test cable to the 400A84, turn the unit on and verify that the “No Short Detected” LED illuminates.

Test cables can be connected between any of the three connectors in “ROW A” and any of the three connectors in “ROW B”. For example, a cable can be tested even if it has a BNC connector on one end and a 5-44 connector on the other.

Three illuminated LEDs indicates that both of the cables conductors are conducting and there is no short. (resistance across the conductors is not measured)

To test for an intermittent connection, wiggle the cable and connectors.

3.0 MAINTENANCE AND REPAIR

There are no adjustments to make on the model 400A84 portable cable tester.

Should the unit require maintenance, contact the factory for assistance. When returning the system for servicing, please include a brief note describing the nature of the problem.

MANUAL NUMBER: 28624

MANUAL REVISION: NR

Model Number
400A84

CABLE TEST BOX

Revision: NR
ECN #:

Performance

Cable Type Tested
Conditions Indicated

2 Conductor	2 Conductor	[1]
Inner Conductor ok	Inner Conductor ok	
Outer Conductor ok	Outer Conductor ok	
No Short Detected	No Short Detected	

Options
-None-

Physical

Form Factor
Electrical Connector (2x)
Electrical Connector (2x)
Electrical Connector (2x)
Size (Depth x Height x Length)
Weight

Benchtop	Benchtop
BNC Jack	BNC Jack
10-32 Coaxial Jack	10-32 Coaxial Jack
5-44 Coaxial Jack	5-44 Coaxial Jack
in [cm]	1.5 x 3.9 x 6.8 [3.8 x 9.9 x 17]
lb [kg]	0.55 [0.25]

NOTES:

[1] 2 conductor unshielded, or 1 conductor and shield.

Accessories
-None-

All specifications are at room temperature unless otherwise specified.

ICP® is a registered trademark of PCB Group, Inc.

In the interest of constant product improvement, we reserve the right to change specifications without notice.

Drawn: <u>PLS</u>	Engineer: <u>BJ</u>	Sales: <u>MRA</u>	Approved: <u>[Signature]</u>	Spec Number:
Date: <u>8-9-05</u>	Date: <u>8-9-05</u>	Date: <u>8/10/05</u>	Date: <u>8/10/05</u>	28623

PCB PIEZOTRONICS^{INC.}
ELECTRONICS DIVISION

3425 Walden Avenue, Depew, NY 14043

800-828-8840

Fax (716) 684-0987

E-Mail: sales@pcb.com